# Hillrock design Maja Ganszyniec, 2019

**Use:** modular leisure furniture set for home interiors, offices and public spaces

**Structure:** frame made of elements of hardwood, softwood, plywood and furniture board

**Seat:** wave springs or webbing straps (depending on the module size), flame retardant foam filling: high-resilience foam and polyurethane foam. Two softness levels of seat cushions available: soft and firm – please indicate your selection upon ordering

Backrest, armrest: flame retardant polyurethane foam

**Base:** aluminium frame and plastic glides; base available in the RAL palette and Sahara collection colours, copper, pearl brass and rust.

**Top:** hardwood plywood, veneered in colours from the Comforty veneer collection.

Attention! Top is not available in these veneers: Alpi Graphite, green oak, Noa oak, rosewood, ebony, gordon oak, top is also not available with high gloss

**Flower pot:** hardwood, softwood, plywood and furniture board structure, high-resilience foam, 99% recycled ABS insert, veneered plywood overlay

Our selection of finishings and fabrics is available from www.comforty.pl/probnik,

Comforty showrooms and our authorised representatives.

#### ADDITIONAL ACCESSORIES AVAILABLE:

Additional backrest cushions:

- Cushion S 28 x 68 cm (100 % silicone balls)
- Cushion M 36.5 x 68 cm (foam core+silicone balls)
- Cushion L 45 x 68 cm (foam core+silicone balls)
- Bolster 73 cm x fi 11 cm

Mobile device charging ports:

- Double USB Powerdot mini Kondator port 5V max. 2.4 A, cable length 1.4m, fi 50mm, black
- Double USB Powerdot mikro Kondator port 5V max, 2 A, cable length 1,5 m, fi 30mm, black
- Wireless charger, under the top, induction Mini/Batt MB-FI 80, fi 80 mm, 5V-9V max 1.6A, output 10W

#### Inbuilt mobile device USB charging ports - Kondator:

- USB charging ports are double. Each can serve two mobile devices
- USB charging ports are compatible with all mobile devices (iPads, notepads, notebooks, mobile phones, etc.), with the EU and CE certificate and flame retardant certificate
- 220 V cable included with each module equipped with USB charging ports
- inbuilt certified power adapter included with each armchair or sofa module equipped with a USB charging port

#### Additional option













#### Available table finish types:

Group Type

A super matt: natural oak

semi matt: brown oak, black oak, American walnut

B semi matt: oak in RAL colours
matt: MDF in RAL colours with quartz particles



# A PLETHORA OF POSSIBLE CONFIGURATIONS


















#### **MODULES WITH STORAGE SPACE**





#### Use of pentagonal modules:

The side of a given size marked in the drawing can be matched with any seat module, footstool or another pentagonal module of the same size from the list of ready configurations. Check which pentagonal, corner modules offers your desired configuration potential.

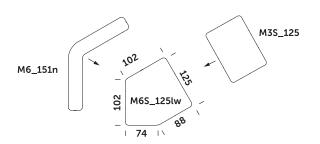



#### Module markings - explanation

M – module

6 – module number

\_151 – total module depth (seat module depth + backrest)

S – seat module

P – pouffe module

N – corner

O – backrest

ST – table

PD – armrest

D – flower pot

w – high backrest

n – low backrest

lw – left module

pr – right module

modules marked with 1 are based on the single seat size 90x64cm or 90x76cm (with deep seats)

modules marked with 2 are based on the double seat size 180x64cm or 90x76cm (with deep seats)

example:

M6\_151wlw

 $\mathbf{M}$ (module)  $\mathbf{6}$ (module number)  $\mathbf{_{151}}$ (depth)  $\mathbf{w}$ (high backrest)  $\mathbf{lw}$ (left module)

#### **OPTIONAL BACKREST CUSHIONS**


#### size

cushion S 28 x 68 cm

cushion M 37 x 68 cm

cushion L 45 x 68 cm

bolster fi 11 cm x 68 cm









high backrest

W/M/S



73 | | 11 |


low backrest




low backrest


#### **READY CONFIGURATIONS**


#### Comforty Hillrock H BC config 1

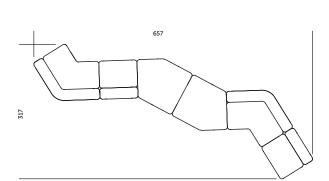

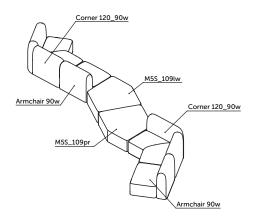



#### Comforty Hillrock H BC config 1A

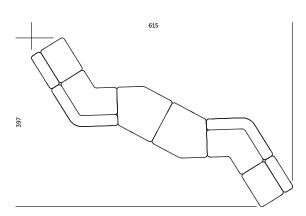

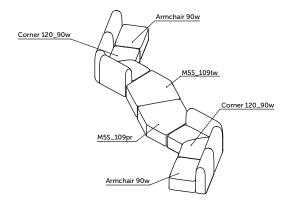



# Comforty Hillrock H GL sofa 2







## Comforty Hillrock H GL sofa 4




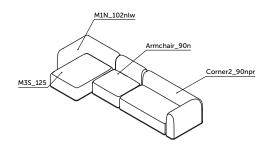


# Comforty Hillrock H GL sofa 5

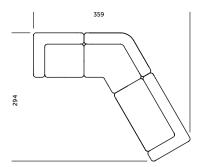


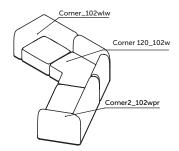





# Comforty Hillrock H W config 5






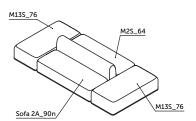


# Comforty Hillrock H WS config 1

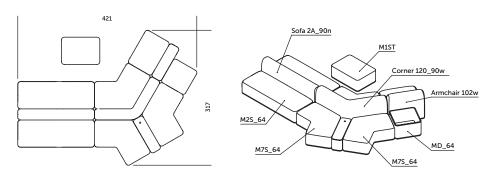



## Comforty Hillrock H BC config 1 ver 2

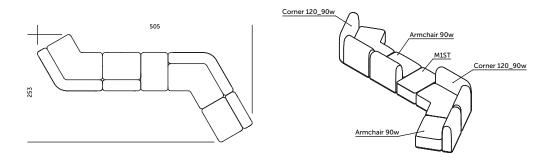


# Comforty Hillrock H BC config 1A ver 2

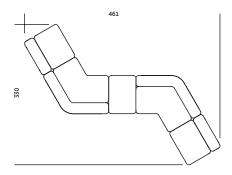


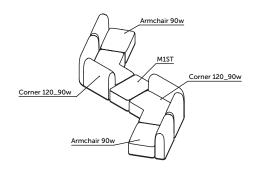


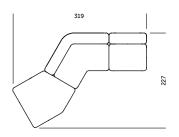





# Comforty Hillrock H BC config 3

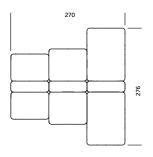


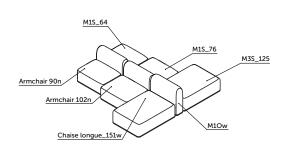


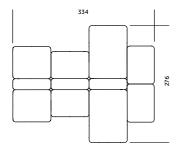

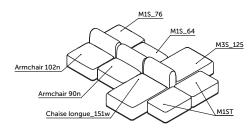



# Comforty Hillrock H GL sofa 6



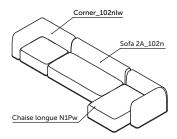



#### Comforty Hillrock H GL sofa 7

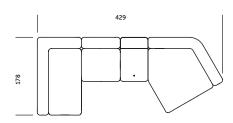


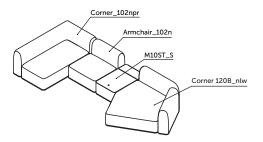


#### Comforty Hillrock H GL sofa 8

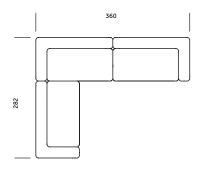


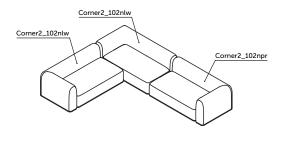


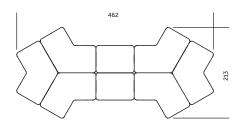


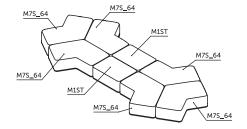


#### Comforty Hillrock H Z config 1

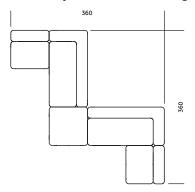


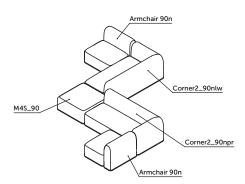


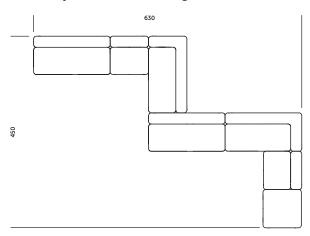

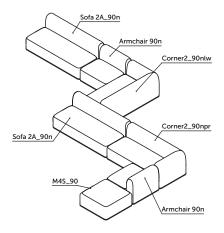



# Comforty Hillrock H GL sofa 5A







# Comforty Hillrock H W config 6 A

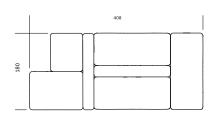


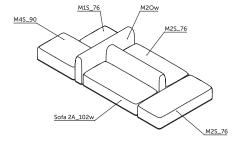

# Comforty Hillrock H BC config 5










# Comforty Hillrock H BC config 7







## Comforty Hillrock H GL sofa 9

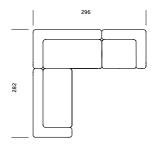

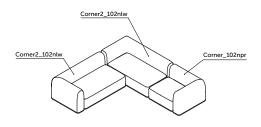



#### Comforty Hillrock H PL sofa 1

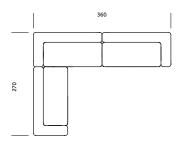

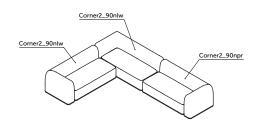



## Comforty Hillrock H PL sofa 2

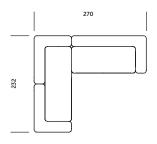





# Comforty Hillrock H Z config 3

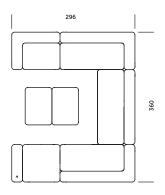


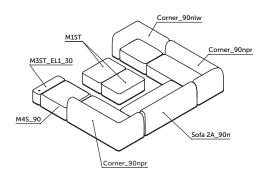


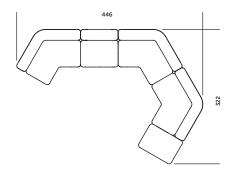

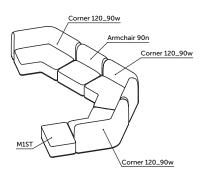


# Comforty Hillrock H Z config 5

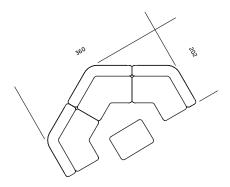


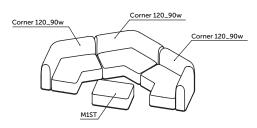








# Comforty Hillrock H BC config 9




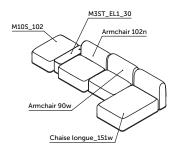








# Comforty Hillrock H BC config 11




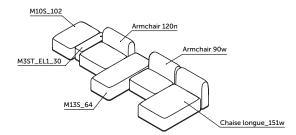


#### Comforty Hillrock H W config 1

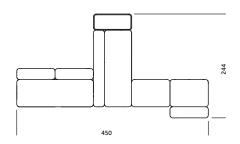


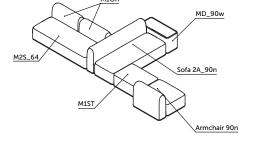





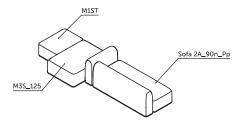



# Comforty Hillrock H W config 3

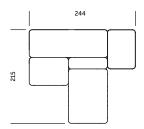


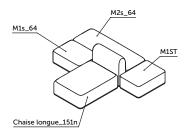


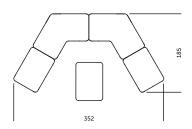


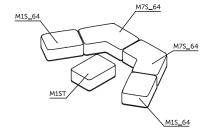

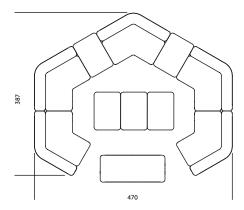

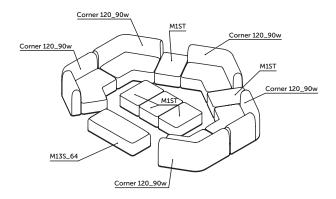


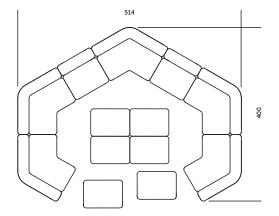

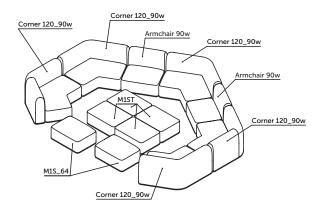



#### Comforty Hillrock H GL sofa 10







### Comforty Hillrock H GL sofa 10 102







#### Comforty Hillrock H GL sofa 11



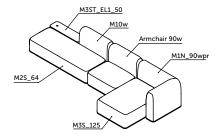


### Comforty Hillrock H GL sofa 11 102




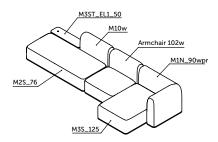


#### **STANDARD CONFIGURATIONS**


#### Sofa 2A 102w






#### Sofa 2A 102n







## Sofa 2A 102w Lp102








#### Sofa 2A 102n Lp102










# Hillrock design Maja Ganszyniec, 2019


#### Sofa 2A 102w Pp102







#### Sofa 2A 102n Pp102

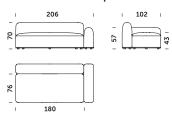





#### Sofa 2A 102w 2p102







## Sofa 2A 102n 2p102







#### Sofa 2 90w







#### Sofa 2 90n







#### Sofa 2 102w







#### Sofa 2 102n







#### Sofa 2A 90w






#### Sofa 2A 90n







#### Sofa 2A 90w Lp









#### Sofa 2A 90n Lp







# Hillrock design Maja Ganszyniec, 2019


#### Sofa 2A 90n Lp90







#### Sofa 2A 90w Pp







#### Sofa 2A 90n Pp







## Sofa 2A 90n Pp90







#### Sofa 2A 90w 2p







#### Sofa 2A 90n 2p







#### Sofa 2A\_90n\_2p90







#### Armchair 102w





#### Armchair 102n






#### Armchair 102w Lp










#### Armchair 102n Lp










#### Armchair 102w Pp










#### Armchair 102n Pp




#### Armchair 102w 2p










#### Armchair 102n 2p












#### Armchair 90w








#### Armchair 90n





# Armchair 90w Lp








#### Armchair 90n Lp










### Armchair 90n Lp90











#### Armchair 90w Pp






### Armchair 90n Pp










#### Armchair 90n Pp90










#### Armchair 90w 2p










## Armchair 90n 2p








### Armchair 90n\_2p90












### Chaise longue 151w










## Chaise longue 151n









## Chaise longue N1Pw







#### Corner 120 102w

90







#### Corner 120 102n







## Corner 120 90w







#### Corner 120 90n







### Corner 90wpr







#### Corner 90wlw







### Corner 90npr







#### Corner 90nlw







#### Corner 2 90wlw







#### Corner 2 90nlw






#### Corner 2 90wpr







### Corner 2 90npr




#### Corner 2 102wlw







### Corner 2 102wpr





#### Corner 2 102nlw







### Corner 2 102npr







#### Corner 102nlw







### Corner 102npr






#### Corner 102wlw






### Corner 102wpr




### Corner 120A wpr

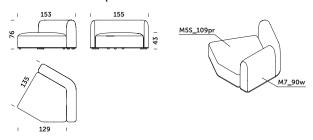

#### M5S\_109pr




#### Corner 120A wlw

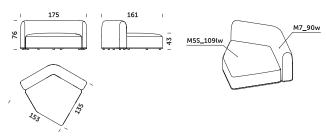

#### M5S\_109lw




#### Corner 120A npr

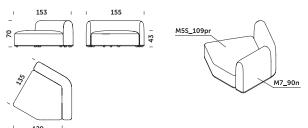

#### M5S\_109pr




#### Corner 120A nlw

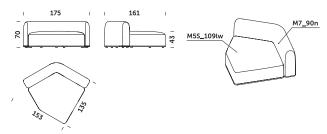

M5S\_109lw




#### Corner 120B wlw

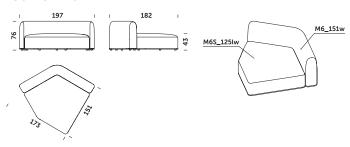


M6S\_125lw



### Corner 120B wpr

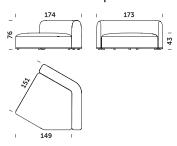




M6S\_125pr



#### Corner 120B npr

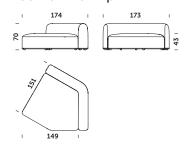





M6S\_125pr




#### Corner 120B nlw

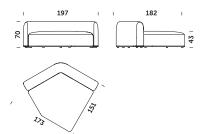








## Corner 120A 10npr

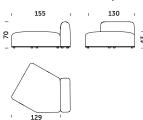







#### Sofa M2 table w








#### Sofa M2 table 102w







## FREE-STANDING ELEMENTS – can be combined with other standard configurations or with each other

#### M1S 64 - seat/ pouffe






### M1S 76 - seat/ pouffe






#### M2S 64 - seat/ pouffe






## M2S 76 - seat/ pouffe





## M4S 90 - seat/ pouffe






#### M8S 64 - seat/ pouffe






## M10S 102 – seat/ pouffe






### M13S 64 - seat/ pouffe






### M13S 76 - seat/ pouffe






### M3S 125 - seat/ pouffe





### M5S 109pr - seat/ pouffe





## M5S 109lw - seat/ pouffe





## M6S 125lw - seat/ pouffe





## M6S 125pr - seat/ pouffe





### M7S 64 - seat/ pouffe





## M7S 102 - seat/ pouffe





## **TABLES**


## M10ST S – table with closed storage







M2ST - table










M1ST – table	
90   64	

M1ST EL1 50 – table with USB port fi 50 mm



M3ST S – table with closed storage



M3ST – table

M3ST EL1 30 – table with USB port fi 30 mm



## M3ST EL1 50 – table with USB port fi 50 mm

90 | 126|





### M3ST EL2 50 - table with double USB port fi 50 mm

90 | |26|







## M3ST I – table with induction charger

90 | 126|





#### M4ST - table

84 90 1381



### M4ST EL1 30 - table with USB port fi 30 mm







## M4ST EL1 50 – table with USB port fi 50 mm







## M4ST EL2 50 – table with double USB port fi 50 mm









## M4ST I – table with induction charger







## M6ST – table







Table can be joined with M6S module

Table can be joined with M6S module

## M6ST EL2 30 – table with double USB port fi 30 mm











#### M6ST EL2 50 - table with double USB port fi 50 mm











Table can be joined with M6S module

## M6ST EL4 50 – table with quadruple USB port fi 50 mm
















Table can be joined with M6S module

#### M6ST EL2 I – table with double induction charger












Table can be joined with M6S module

#### M11ST - table





### M11ST EL1 30 – table with USB port fi 30 mm







## M11ST EL1 50 - table with USB port fi 50 mm







### M11ST EL2 50 – table with double USB port fi 50 mm









### M11ST I – table with induction charger







#### M12ST - table







## M12ST EL1 30 - table with USB port fi 30 mm







## M12ST EL1 50 - table with USB port fi 50 mm







#### M12ST EL2 50 - table with double USB port fi 50 mm









## M12ST I – table with induction charger







## MD 64 – flower pot with ABS insert





## MD 90w - flower pot with ABS insert





#### MD 90n - flower pot with ABS insert



